

TE3 Firmware Update Procedure APPLICATION NOTE



TE3 SERIES SOFTWARE UPDATE V0175 PROCEDURE

To update a TE3 use the following procedure:

Save the TE3 Update Zip File Folder to your computer desktop. Create a new folder on your desktop and name it as you desire.

Right click on the TE3 Update folder supplied and copy all the files to your new folder. When completed it will have around 90 files.

-Load files into good quality USB thumb drive. Copy and paste into the top level of the USB drive. Do not have any other files in this level. You can now remove the USB drive.

-With the soft start power removed, insert thumb drive into USB port on bottom left side of chassis unit.



-Apply control power, and allow display to stabilize.

-From the opening screen, enter programing by selecting the HOME button, and then select “DEVICE”.

-From the “DEVICE Settings screen, select “Update Firmware” and then “Start Firmware update”, and then “Yes” to confirm. Note: Make sure you do not turn off/remove power while it is performing the update.

-The TE3 will now update the firmware. Allow this process to proceed until complete (30-90 sec), unit will reboot and standard display will return.

-Remove control power, and release keypad from chassis by prying tabs on right side. See below on removal.



Insert flat screwdriver in small rectangle opening and pry up slightly. Then move screwdriver to second rectangle slot and repeat, and lift the keypad out of the case and flip it over. Leave the white cable attached.

-Remove thumb drive from chassis, and insert in USB port on the back of keypad (see silver receptacle).



-Apply control power, and allow display to stabilize.

-Enter programing, and select "DEVICE".

-Select "Update Firmware" and then "Start Firmware update", and then "Yes" to confirm.

-Allow the update to proceed until complete (30-90 sec) and the standard display to return.

-Remove control power, remove thumb drive from Keypad, and clip the keypad back into the case.

-When unit is re-powered, enter programing and select "Device". Then scroll to second page and select "About". The software version at the bottom of the display should end in "V0175".

 **Learn More**

For more information, contact Power Apparatus & Components (PAC):

T: (800) 231-1412 x2993

E: TIC-Controls@Toshiba.com